

PHI/F-9308-860-0 (XL-5200)

REPLACEMENT LAMP FOR SONY® SXRD PROJECTION TELEVISION

USER INSTRUCTIONS

CAUTION:

- Do not attempt to remove the lamp immediately after use; doing so can cause serious burns. Prior to removing lamp, switch off the power supply to the television and wait approximately 60 minutes or more to allow for complete lamp cooling.
- Avoid touching the glass portion(s) of the lamp with bare hands; fingerprints, dirt and dust may cause early lamp failure and/or image obscurity. It is recommended that gloves be worn when replacing the lamp.
- When transporting the replacement lamp, use the box that is provided to avoid breakage.

WARNING:

- To avoid overheating and/or fire, ensure that the replacement lamp is mounted securely.
- Hg - LAMP CONTAINS MERCURY, Manage in Accord with Disposal Laws. See: www.lamprecycle.org or 1-800-555-0050.

REPLACING THE LAMP

1

Switch off power to the television and wait about two minutes until the cooling fan stops. Unplug the power cord from the wall outlet. **Allow the television to cool for at least 1 hour.**

2



Remove the outside lamp cover by releasing the two clamps on the cover door.

Note: The outside lamp cover may vary by model and may require simultaneously pressing the clamp and the button on the left side of the cover to release it.

3



Remove the lamp unit door by first turning the screw counterclockwise, then sliding the lever to the left.

4



Remove the lamp unit by grasping the indented grooves on the top corners of the lamp and pulling straight out. If the unit is difficult to remove, pull the right side of the lamp for additional traction. Dispose of the lamp in accordance with disposal laws.

Note: To avoid injury, exercise caution when removing the lamp unit and do not place your hand in the lamp storage area.

5




Insert the new lamp unit, pressing it firmly into place. Pay attention to the orientation and direction of insertion, as the lamp compartment is tilted. Ensure that the lamp is securely mounted into the compartment; failure to do so may cause a fire or the screen to go dark. If the lamp is not securely reattached, the self-diagnostic function may be triggered and the POWER LED blinks several times.

Note: To avoid shortened lamp life and/or reduced picture quality, do not touch the glass portion of the new lamp.



6

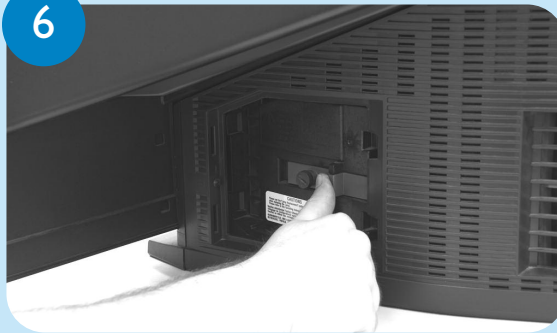

Replace the lamp unit door by inserting the two tabs in the slot from the left side. Slide the lever to the right; turn the screw clockwise to secure the door.



7



Replace the outside lamp cover by inserting it from the left side. Press the two tabs on the right side to secure the door. [Other models require inserting the cover from the right side and pressing the clamp on the left side to secure the cover.]

8

Turn on the television and set the Lamp Replacement option in the Setup or General settings. This setting is necessary to inform you when the next lamp replacement is needed.

Note: Until you set the Lamp Replacement option, a message announcing that the lamp is at the end of its life will appear every time you turn on the television.

Sony® is a registered trademark of Sony Corporation.

PHILIPS